


**FK003D459/FK003D495 FRONT LINE INSTALLATION TIP**

**When installing front brake lines on your Kawasaki ZX6RR/636 05-06 or 2006+ ZX-10R please make sure to grind off the right side tab indicated in the picture of the front master cylinder. This is important to allow the banjo fittings to be moved to the side and let the brake lever switch arm travel freely and without obstructions.**

**Please feel free to contact us with any questions at 800-685-6633.**

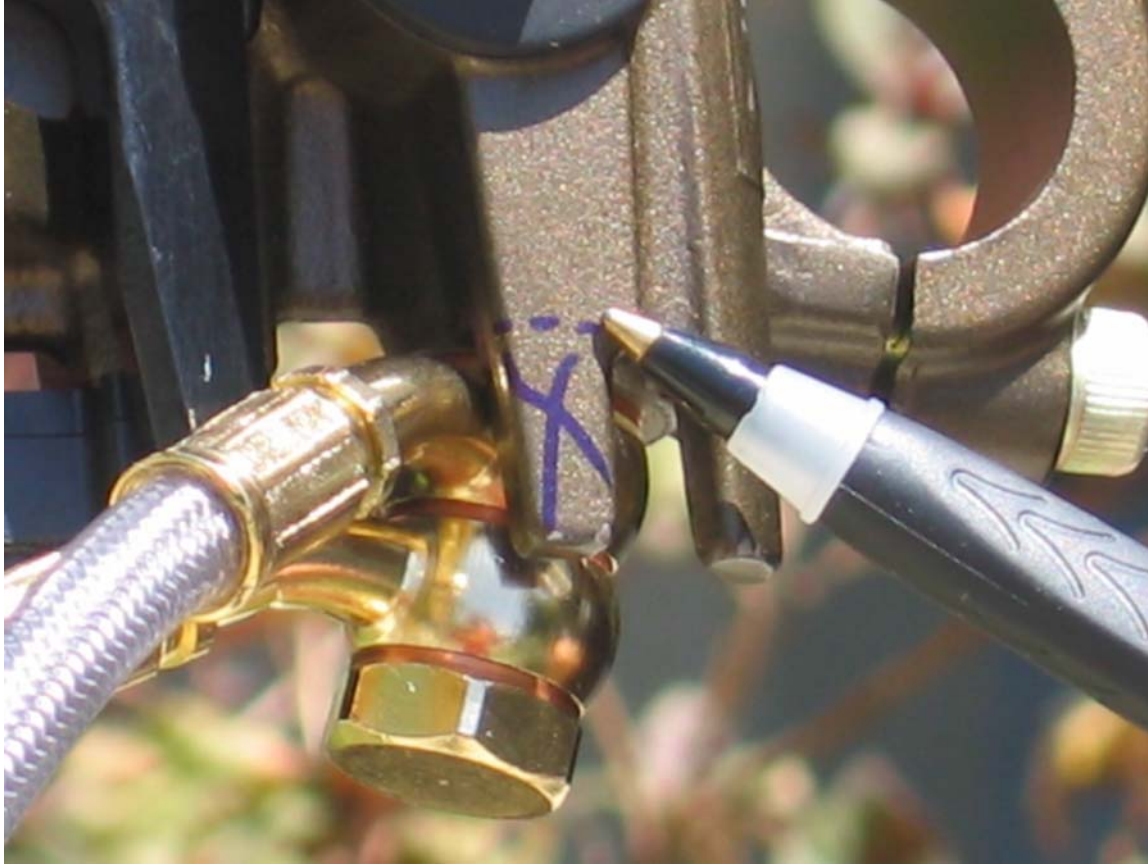

**Grind off "X" section**

